

# 24-HOUR PROTECTION...EVERY DAY

*Congratulations on the purchase of your Gary® Personal Safe with electronic keypad.*

## MANUAL

First, read the manual carefully before you start using the safe.

## TO OPEN THE SAFE

To open the door of the safe for the first time: Press **1, 5, 9,** and **B.** While you are pressing the numbers the top yellow light on the keypad will display. After pressing **B** the green light will come on. Now turn the knob to the right and open the door.

## TO CLOSE THE SAFE

Close the door and turn the knob to the left. The door will now be locked.

## TO PROGRAM THE DIGITAL COMBINATION LOCK

1. Press the red button (X) on the inside of the door near the hinges; then release it and you will hear two beeps and the yellow light will light up.
2. Now press from 3 to 8 numbers that you wish to use as a combination, followed by the letter **B.** Be sure to write them down immediately, so you don't forget how to open the safe. Repeat this combination and confirm by pressing the letter **B.**
3. Check if you have entered the correct combination a couple of times – *with the door open* – by pressing the numbers you have chosen followed by **B.** If you have entered the correct combination, first the yellow then the green light will come on. Then you can turn the knob to the right and the door will open.
4. If the procedure operates without any problems you can close the door and turn the knob to the left, after 5 seconds the electronic closing-mechanism will lock.
5. To open the safe follow the procedure as described in Point 3.
6. If the incorrect code is used, the door will not open. You must now wait 20 seconds to try again. More incorrect codes will freeze the system for one (1) hour. (See override key instructions.)
7. After entering your correct personal combination, you have 5 seconds to turn the knob before the mechanism relocks. If it relocks, enter your combination again.

## TO CHANGE THE BATTERIES

Open the door and move the lid of the battery holder that is on the back of the door (Y) up. Place 4 pieces, **1.5V, AA SIZE ALKALINE** batteries in the holder. Put the lid back in place. You now need to reprogram your personal code as previously described in Points 1 and 2.

## BATTERY REPLACEMENT WARNING

If the batteries are low, a red light (in the middle) will warn you immediately. To test the batteries, enter your code to open the door. When the batteries are low the red light will light up. If this does not occur, the batteries are fine. When the red light flashes you should change the batteries immediately. Failure to do so could result in you not being able to open the safe without restoring to the use of the override key.

## OVERRIDE KEY INSTRUCTIONS

### TO OPEN THE SAFE

For your convenience, we have engineered a manual override system in your Protector EL-1. If you forget or misplace your combination, remove the small plate in the middle of the lock. Behind this you will find a keyhole. The key delivered with your safe will fit in this keyhole. Insert the key and turn it to the left in a counter-clockwise direction. Turn also the knob in a clockwise direction toward the right. This will manually open your safe at any time.

**\*\* Do not keep the key in the safe. In the event of battery failure you will not be able to open the safe. \*\***

**Gary®**  
**By FireKing®**

A member of the FireKing® Security Group