





AVJ42, W42A

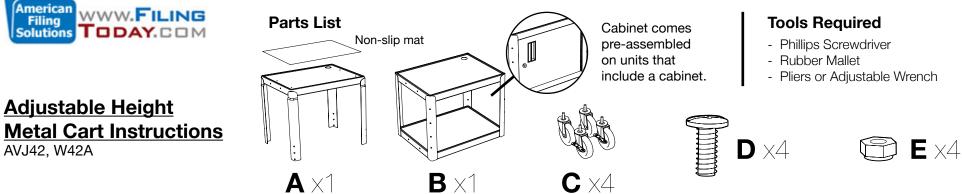

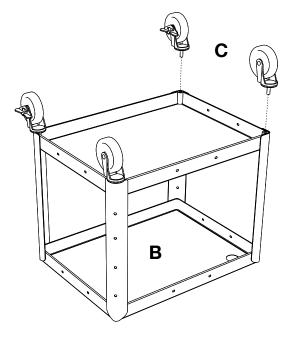

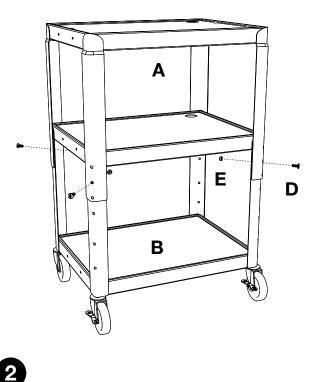

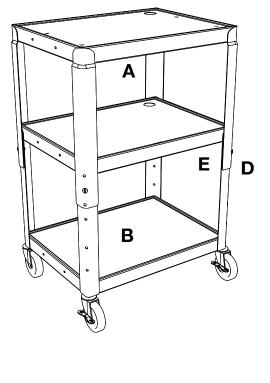



Position the bottom shelf **B** so that the caster holes are facing up. Insert caster C into the caster holes on the bottom of shelf B. Use a mallet to set the casters properly.

Flip bottom shelf **B** so that it is on its side. Set top shelf **A** so that it overlaps bottom shelf B. Align the screw holes so that the top shelf **A** is at the desired height.

Insert screw **D** through the aligned screw hole of A and B and fasten nut E with pliers and screwdriver. Place Non-slip mat on desired shelf. The cart is now complete.

3

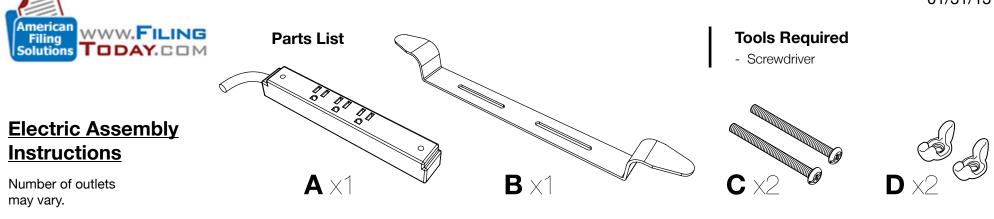

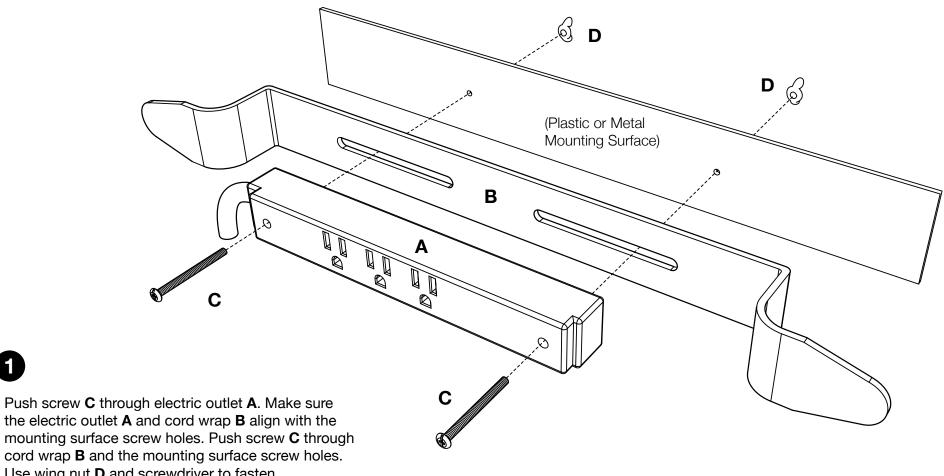

Use wing nut **D** and screwdriver to fasten.

1