#### ASSEMBLY INSTRUCTIONS & PARTS MANUAL #1971199

# **Z-Line Standard Boltless Rack Installation Instructions**

(888) 891-1970 x 8958 Fax: (951) 679-0455

### **RETAIN INSTRUCTIONS FOR FUTURE REFERENCE!**

Congratulations on your purchase of Z-Line Standard Boltless Rack from **AFS**! Z-Line's

interlocking keyhole design not only makes installation fast and easy but eliminates the need for clips, gussets, sway braces or other hardware commonly used in conventional shelving. This allows completely free access to your stored materials from all sides of the unit.

Z-Line Boltless Rack is available in both standard- and heavy-duty strengths, in a variety of heights, widths and depths to fit virtually any storage application. Adding an extra shelf is quick and easy. And starter and adder units allow for joining shelving units together.

#### **GENERAL SAFETY INFORMATION**

Some parts may have sharp edges. CARE must be taken when handling the pieces to avoid injury. For safety, wear a pair of work gloves when assembling or performing any maintenance on shelving.



#### SHELF LOAD CAPACITIES

OHEEL EOAD OALAOITIEG								
Unit Width	Load Capacity, No Deck Support	Load Capacity, With Deck Support						
48"	1750 lbs.	2250 lbs.						
72"	1250 lbs.	1750 lbs.						
96"	750 lbs.	1250 lbs.						




## ASSEMBLY OF STANDARD BOLTLESS RACK

Tools Needed: A rubber mallet for seating the shelf supports. Two people are recommended for assembly. Approximate assembly time: 15 to 30 minutes per section.

1. The reference numbers used throughout this sheet refer to the illustration on the back cover. This is to help you to identify the various parts as


they are mentioned.


2. Depending upon whether you ordered a single unit or an adder unit, you may have one or both of the styles of upright shown at right:

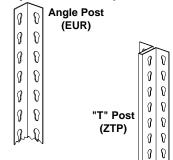

A single unit will use EUR posts for all four uprights, as shown below in Figure A. If you plan on installing an adder unit, however, you should

build your starter unit with two ZTP posts on one end (which will join with the adder), as shown in Figure B.

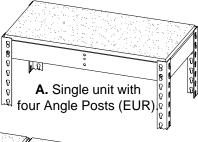




B. Two or more units with Angle Posts (EUR) on each end and "T" Posts (ZTP) as intermediate uprights.

3. With help from an associate, or using a wall for support, connect two EUR uprights (Ref. No. 1a)

together with two front-toback supports (Ref. No. 2), one at the top and one at the bottom. Be sure the front-to-back supports are fully seated in the keyhole slots, as shown at right.

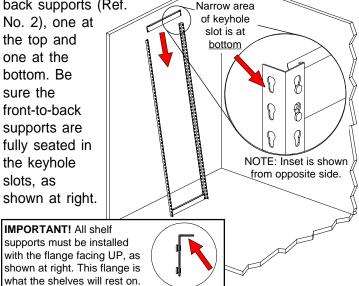


4. Place a third front-to-back end support in the middle slots of the two uprights (or at whatever level you want your third shelf to be). This forms one end of the shelving unit. 5. Repeat steps 3 and 4 to construct a second set of unit ends. NOTE: If you are planning to install an adder unit. this second set should


(Ref. No. 1b) so that adjacent sections can be tied together. Carefully review step 2 and step

6. With the help of an associate. connect the two unit ends with left-to-right shelf supports (Ref. No. 3). Again, be sure that the flange on the shelf support is facing up, and that the shelf supports are fully seated, as was illustrated in step 3.


consist of ZTP uprights

10 to better understand this.

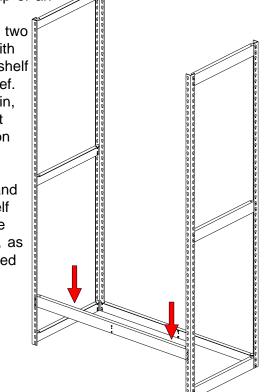

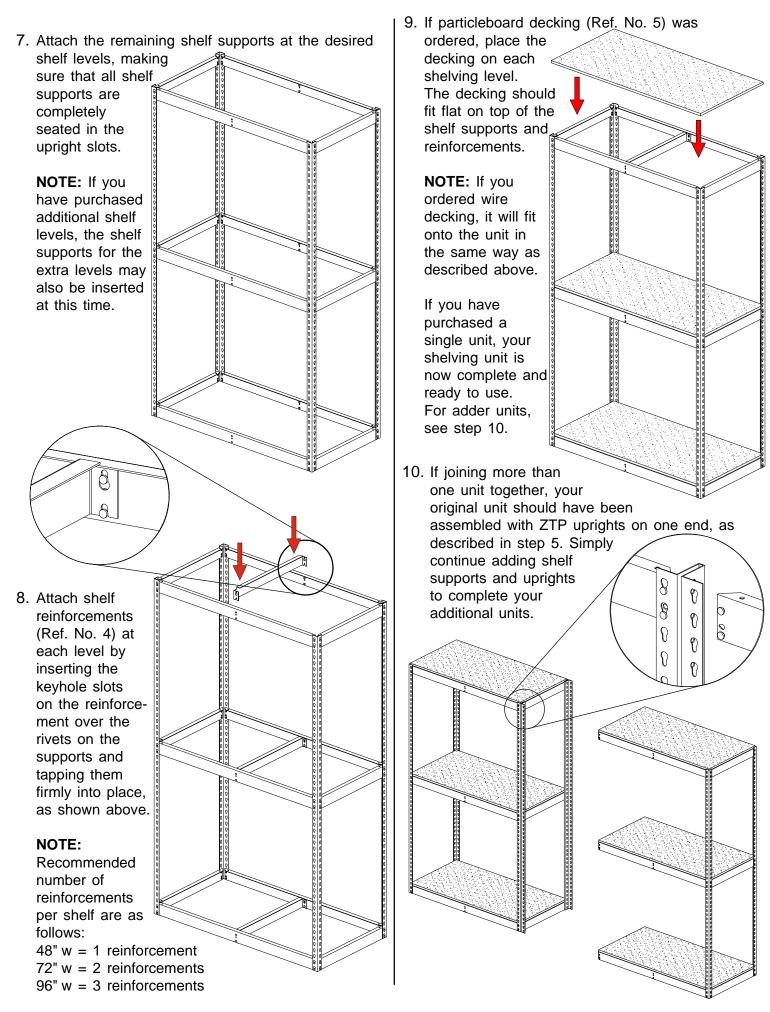

## REPLACEMENT PARTS

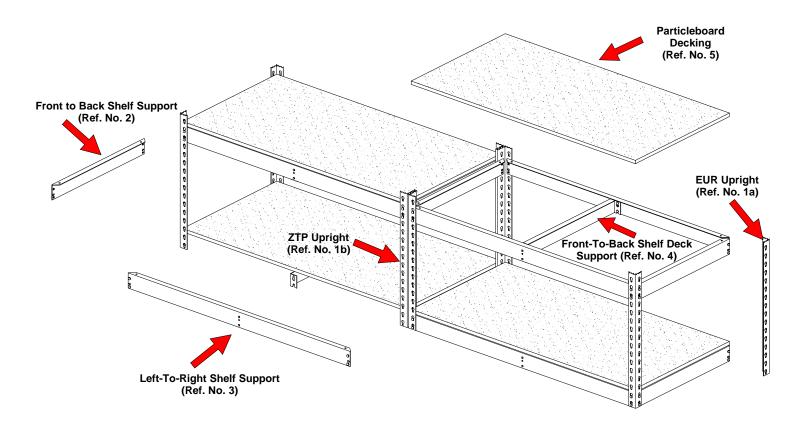

REF.	SINGLE OR STARTER UNIT			ADDER UNIT REF.			
NO.	DESCRIPTION	QTY.*	PART NO.**	NO.	DESCRIPTION	QTY.*	PART NO.**
1a	Angle Post	4	EUR-hh	1b	"T" Post	2	ZTP-hh
2	Front-to-Back Shelf Support	6	LRA-dd	2	Front-To-Back Shelf Support	6	LRA-dd
3	Left-To-Right Shelf Support	6	LRA-ww	3	Left-To-Right Shelf Support	6	LRA-ww
4	Front-To-Back Shelf Deck Suppo	rt 1-3	SDS-dd	4	Front-To-Back Shelf Deck Suppor	t 1-3	SDS-dd
5	Optional Particleboard Decking	3	PB-wwdd	5	Optional Particleboard Decking	3	PB-wwdd

<sup>\*</sup>Quantities apply to the basic 3-shelf unit only. If you have ordered additional shelf levels, quantities will vary accordingly. On items where a range is given, quantities will vary depending upon number of deck supports you received.

We make every effort to ensure that all units ship complete with all parts and arrive undamaged. However, should your unit contain missing or damaged parts, replacements may be obtained directly from us. To obtain proper replacement parts, follow the instructions below:

#### TO OBTAIN PROPER REPLACEMENT PARTS, PLEASE PROVIDE THE FOLLOWING INFORMATION:

- Description of part(s) needed and part number(s) as shown in Parts List (above)
- Color (i.e. Medium Grey, etc.)
- Was item missing, or was it damaged?

- Purchase Date
- Your company name
- Contact person's name
- Who the product was purchased from

If requesting parts by telephone, ask for customer service and have as much of the above information ready as possible.

<sup>\*\*</sup>Where the suffix "ww", "dd", or "hh" is used in the part number, the width (ww), depth (dd) or height (hh) is substituted in the part number. For example, for an 84" high Angle Post, the part number would be EUR-84.