# INSTALLATION INSTRUCTION

PRODUCT: JUPITER CLUSTER FRAMES


MANUAL: Z000000071






(\_k (+b, | 106764(| - 34)04\_00 d)( (\_X( ++0 0) (\_XX) +(0 0)



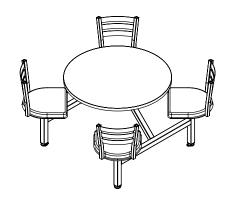

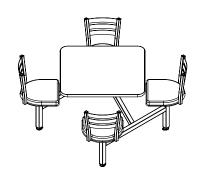

M. HIL

**ATTENTION INSTALLERS:** PLEASE PRESENT INSTALLATION DOCUMENTS TO FACILITIES MANAGER.



American Filing Solutions
P.O. Box 891719, Temecula CA 92589
Tel: 1-951-694-4150 or 1-888-891-1970
Fax: 1-951-506-7717 or 1-888-891-9970
Email: sales@FilingToday.com


www.FilingToday.com


### **COMPONENT INDEX FOR ASSEMBLY**


#### **UNPACKING YOUR SHIPMENT**


Unpack and identify each component in each box that you received. If your shipment is missing parts, or too many parts were shipped, please contact Plymold Seating. Phone 507-789-5111


#### **COMPONENTS:**

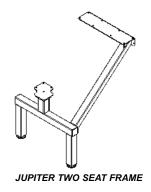

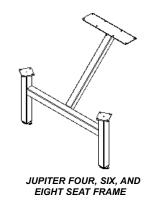

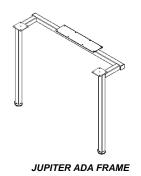

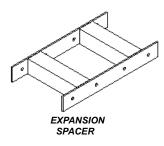

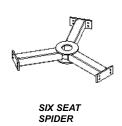

#### **TOOLS REQUIRED:**

SCREW GUN W#2 PHILLIPS BIT SCREW DRIVER TAPE MEASURE PENCIL OR MARKER WRENCH SET 7/16" SOCKET AND OPEN END WRENCH



ADJUSTABLE GLIDE



FLOOR ANCHOR



#10X1.00"




1/4-20 X 5/8" BOLT



1/4-20 NUT

#### STEP 1: GLIDE ASSEMBLY

1. Screw the thread in glide into the insert in each of the four (4) legs.



**GLIDE DETAIL** 


#### STEP 2: ASSEMBLING TWO AND FOUR FRAME

- 1. Align holes in table angles. (fig.1)
- 2. Fasten the two frame halves together using 1/4"-20 bolts and nuts.

Note: Hand tighten nuts and bolts.

- 3. Level table angles. (fig.2)
- 4. Tighten nuts and bolts using a wrench.

**Note:** If the table tops are wider than 24" a expansion spacer is regiured. (fig. 3)

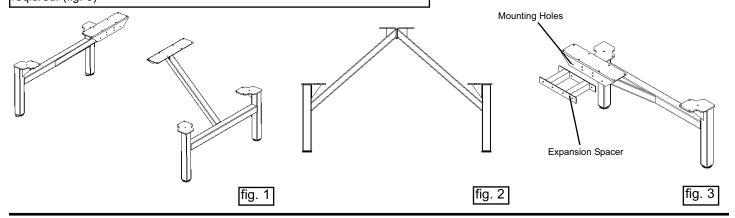



#### STEP #3 ASSEMBLE SIX SEAT FRAME


- 1. Align holes in table angle with holes in spider. (fig.1)
- 2. Fasten the frames and spider together using 1/4"-20 bolts and nuts.

Note: Hand tighten nuts and bolts.

- 3. Level table angles.
- 4. Tighten nuts and bolts using a wrench.

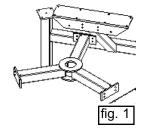


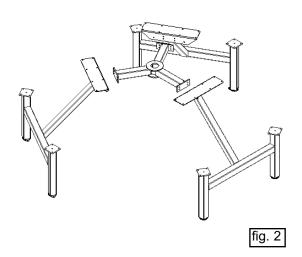


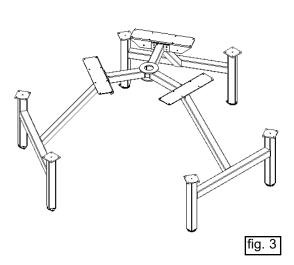

#### STEP #4 INSTALLING TABLE TOP

- 1. Place table top on frame and center.
- Secure table top from moving while fastening using six (16) #10 x 1.00" screws.

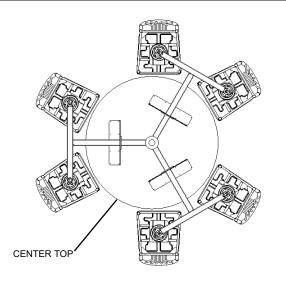


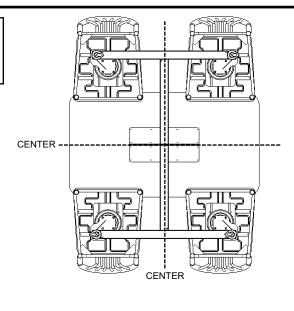


**BOTTOM VIEW OF UNITS** 

#### STEP #5 POSITIONING AND LEVELING BOOTHS

- 1. Confirm location of booths with floor plan.
- 2. Level booths by adjusting thread-in glides.

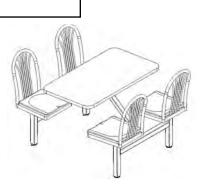


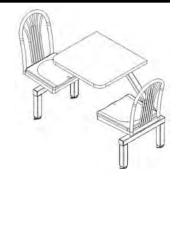

#### STEP #6 FASTENING GLIDES TO FLOOR

- 1. Rotate glides so that the mounting hole is pointing towards the center of the booth.
- 2. With a pencil, mark the hole location on the floor using the holes in the
- 3. Turn the glide away 90 degrees from its current position to expose the mark on the floor.
- 4. Using a hammer drill and a 1/4" masonary bit, drill a 1 1/4" deep hole on the pencil mark.
- 5. Place a plastic anchor in the hole and then rotate glide back so its hole lines up with thr plastic anchor in the floor.
- 6. Insert a #10 x 1.00" screw through the hole in the glide and secure into the plastic anchor.


NOTE: Frames must be anchored to the floor to maintain stability and prevent personal injury.

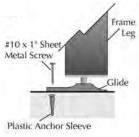


Floor Fastening

## STEP #7: FASTENING CHAIRHEADS TO FRAME

- 1. Place chairhead onto frame by locating the four studs on the chairhead and inserting the studs into the the holes on the plates.
- 2. Secure the chairhead to the frame usong 1/4"-20 nyloc nuts.
- 3. Tighten chairhead using a 7/16" wrench.

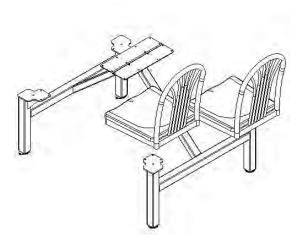

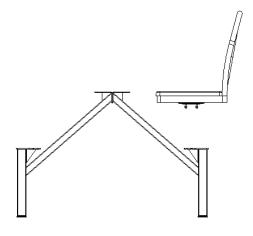

### STEP #8: CARE

1. Clean furniture and protect unit ready for use.

#### **CARE & CLEANING:**

#### Day to day soil

Remove ordinary dirt and smudges with a mild soap and warm water solution. Rinse with a water dampened cloth. Dry with a soft cloth or towel.

#### Heavy soiling

Soiling can be removed with the following non-abrasive household cleaners and soft cloth.

Formula 409 All-Purpose Spray Cleaner Fantastik Spray Cleaner Other similar household cleaners

Rinse cleaned area with water dampened cloth. Dry with a clean cloth or towel.

#### For more difficult stains

Dampen soft white cloth with a solution of (10%) household bleach and (90%) water. Rub gently. Rinse with water dampened cloth to remove bleach concentration.

#### **Please Review Carefully**

Should you desire to use other cleaning methods carefully try them in an inconspicuous area to determine potential damage to the material. Never use harsh solvents or cleaners which are intended for industrial applications. To clean stained or soiled areas, a soft white cloth is recommended. Avoid use of paper towels.

#### PRODUCT WARRANTY

Plymold warrants all products manufactured and/or marketed by Plymold to be free from defects in material and workmanship under normal usage and service for one (1) year from date of purchase unless extended warranties have been established for specific products. The customer assumes responsibility for normal wear and tear.

This Warranty Agreement excludes all products or component parts that, in the opinion of Plymold, have been subjected to negligent use, misuse, alteration, accident or improper installation. Plymold reserves the right to make design changes, improve design or change specifications at any time without any contingent obligation to owners of products previously sold.

Plymold shall not be held responsible by customer or potential customers for failure to perform any of the obligations of this Warranty Agreement if such failures are the result of circumstances of Force Majeure such as, but not limited to floods, earthquakes, transportation strikes, labor disputes with any outside suppliers, or any other conditions beyond the control of Plymold.



American Filing Solutions
P.O. Box 891719, Temecula CA 92589
Tel: 1-951-694-4150 or 1-888-891-1970
Fax: 1-951-506-7717 or 1-888-891-9970
Email: sales@FilingToday.com
www.FilingToday.com